

DAS NX PANELS

- To **arm system**: Enter 4digit code or press on (if enabled)
- If service light is on
 - Step 1.
 - press *2
 - Step 2.
 - If **zone 1** light is on, press1.
 - Zone 1 light = over current fault
 - Zone 2 light = siren trouble
 - Zone 3 light = main box tamper
 - Zone 4 light = expander power trouble
 - Zone 5 light = expander low battery
 - Zone 6 light = expander box tamper
 - Zone 7 light = expander trouble
 - Zone 8 light = --
 - If **zone 2** light is on
 - Press 2 to indicate faulty zone tamper
 - If **zone 3** light is on
 - Press 3 to indicate zone low battery
 - If **zone 4** light is on
 - Press 4 to indicate zone loss of supervision
 - If **zone 5** light is on
 - Press 5 to indicate trouble zone
 - If **zone 6** light is on
 - Reserved
 - If **zone 7** light is on
 - Failure to communicate
 - If **zone 8** light is on
 - Loss of system time

To exit the service menu press: ##

- To **set system** clock
 - Press: *97. master code. Time (EG 1730 for 5.30pm)#
- To set **system date**
 - Press: *96. master code. Day of the week. Month. Date. Year.
(EG: 3.08.1700)# for Tuesday August 17th 2000

- To **test communications**
 - Press: *44 and enter code to silence alarm
- To set **codepad tones**
 - Press: *0 – press 1 for higher tone or 2 for lower tone.#.
- To view **alarm memory**
 - Press: *3, check zone lights, then press #
- To reset **smoke detectors**,
 - Enter code to silence alarm and press *7
- To **change codes**
 - Press: *5. master code. Enter user no. 01 to 99 press #
Enter new code, press # (user 01 is master code)
(To delete code, press chime button 4 times)
- To select **authority level and partition**
 - Press: *6. master code. Enter user no. 01 to 99.#. Select
4 for master code..5 for arm/disarm..6 for bypass zones.
7 for open/close. Press*. Select partitions. Press *
- To **bypass**
 - Press bypass key. Enter 2 digit zone number, press bypass key again,
Press #
- To turn **chime** sound up or down
 - Press * other scroll up or down.